

CHRISTIAN ANDRE



FINISHES

DEEP BRONZE

BLACK BRONZE

SOFT BRASS

DARK GRAPHITE

NATURAL SILVER

SANDCASTING

CRAFTED FROM SOLID BRASS, OUR FIXTURES ARE CREATED USING THE SAND CASTING TECHNIQUE. THIS METHOD INVOLVES POURING MOLTEN METAL INTO SAND MOLDS, ENSURING THAT EACH PIECE CONTAINS UNIQUE DETAILS AND TEXTURES. DUE TO SMALL-BATCH CASTING, EVERY OBJECT CARRIES SLIGHT AND UNIQUE DIFFERENCES. TRACES OF TRUE CRAFTSMANSHIP CAN OCCUR.

BRASS / FROSTED GLASS

MADE FROM BRASS, OUR PRODUCTS ARE PATINATED IN FIVE DISTINCT COLOR FINISHES.

THROUGH OXIDATION AND THE PASSAGE OF TIME, THE BRASS FINISH CAN CHANGE.

BRASS IS A NATURAL, RAW MATERIAL WHEN EXPOSED TO THE ELEMENTS, IT MAY DEVELOP A DISTINCTIVE PATINA, GIVING EACH PIECE UNIQUE CHARACTER AND AUTHENTICITY.

CLEANING INSTRUCTIONS

MAKE SURE THE LIGHT FIXTURE IS TURNED OFF AND DISCONNECTED FROM THE MAIN POWER SUPPLY BEFORE CLEANING.


FINISHES

BESPOKE FINISHES UPON REQUEST.

LEAD TIMES

EXPECTED DELIVERY TIME IS APPROXIMATELY 8 WEEKS.


CURVED WALL LANTERN

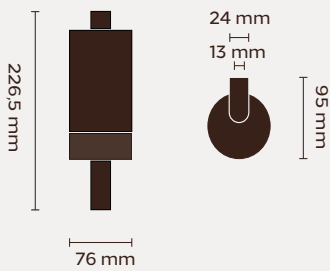

SPECIFICATIONS

DIMENSIONS	226.5 H, 76 W, 95 D MM
WEIGHT	APPROX. 3000G
VOLTAGE	220-230V
LAMPING	BULB G9 INCLUDED (2300K, 1,8W, 170LM AND NON-DIMMABLE)
MATERIAL	SOLID BRASS / FROSTED GLASS
INSTALLATION	PRECISE CABLE POSITIONING REQUIRED (OPENING FIXTURE 13 MM)
PACKAGING	120 H, 320 L, 120 W MM
*EXTERIOR	RESIN APPLIED INSIDE THE FIXTURE TO PREVENT WATER INGRESS. BRASS IS A NATURAL, RAW MATERIAL. WHEN EXPOSED TO THE ELEMENTS, IT MAY DEVELOP A DISTINCTIVE PATINA, GIVING EACH PIECE UNIQUE CHARACTER AND AUTHENTICITY.

PRODUCT RANGE	SOFT BRASS	DEEP BRONZE	BLACK BRONZE	DARK GRAPHITE	NATURAL SILVER
					
APPLICATION					
INTERIOR	CWL - 01 - SB	CWL - 01 - DB	CWL - 01 - BB	CWL - 01 - DG	CWL - 01 - NS
EXTERIOR*	CWL - 02 - SB	CWL - 02 - DB	CWL - 02 - BB	CWL - 02 - DG	CWL - 02 - NS

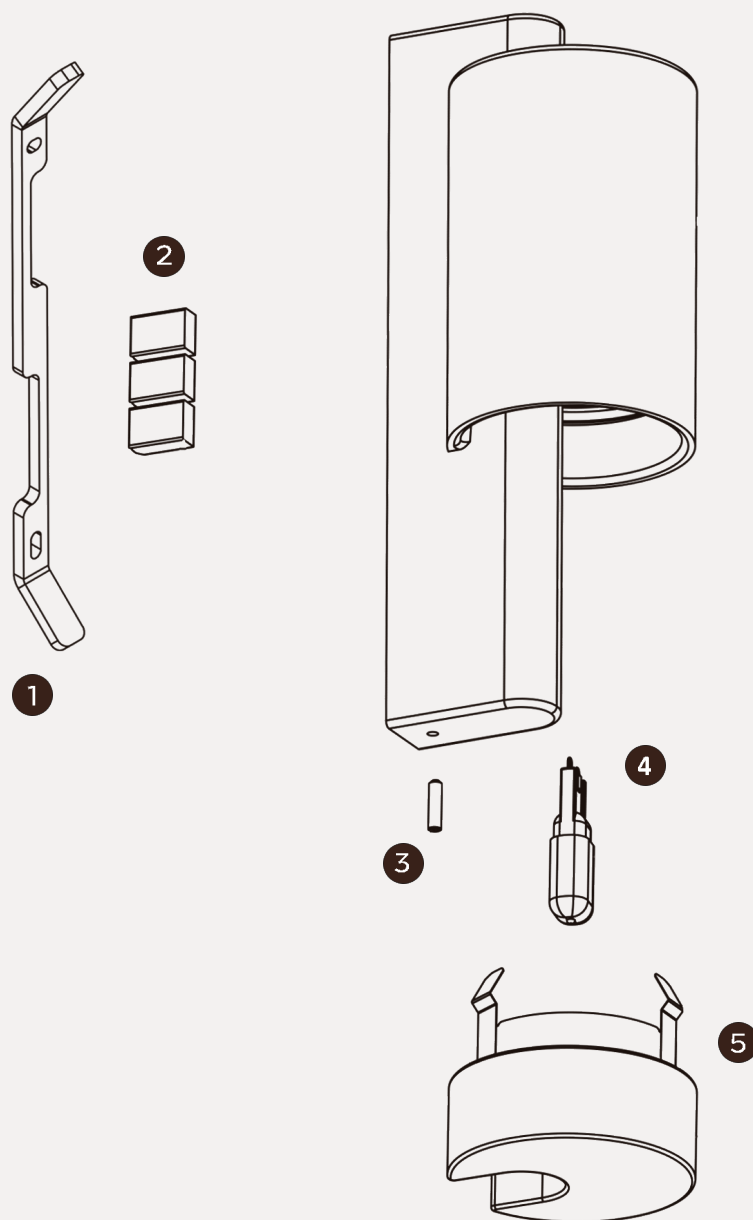

STEP 0: PACKAGE CONTENTS

- USE THE PROVIDED GLOVES WHEN HANDLING AND INSTALLING THE FIXTURE/GLASS.
- PLEASE HANDLE BOTH THE GLASS AND THE FIXTURE WITH CARE TO AVOID ANY DAMAGE.
- ON THE PREVIOUS PAGE YOU CAN SEE THE BREAKDOWN OF THE DIFFERENT COMPONENTS.
- BEFORE SHIPPING, THE GLASS WAS ALREADY INSTALLED INSIDE THE FIXTURE. THE GLASS IS HELD IN PLACE BY A SPRING AND CAN BE EASILY REMOVED BY GENTLY PULLING IT OUT OF THE TUBE.
- KEEP THE GLASS IN A SAFE PLACE UNTIL LATER.

STEP 1: MOUNT THE BRACKET TO THE WALL (DOWNLIGHT ONLY)

- POSITION THE BRACKET AT THE DESIRED HEIGHT AND LOCATION ON THE WALL, WITH THE LONGEST PART OF THE BRACKET POSITIONED AT THE TOP.
- USE APPROPRIATE SCREWS AND WALL PLUGS TO SECURELY FASTEN THE BRACKET.
- ENSURE THE BRACKET IS LEVEL BEFORE PROCEEDING TO THE NEXT STEPS.

STEP 2: CONNECT THE WIRING TO THE LIGHT FIXTURE

- FOLLOW STANDARD SAFETY GUIDELINES AND TURN OFF THE POWER SUPPLY BEFORE MAKING ANY ELECTRICAL CONNECTIONS.
- CAREFULLY CONNECT THE WIRES FROM THE WALL TO THE CORRESPONDING CABLES OF THE LIGHT FIXTURE.
- IN CASE OF THE CWL-02 (EXTERIOR), USE WATERPROOF CONNECTIONS.
- ENSURE ALL CONNECTIONS ARE SECURE AND PROPERLY CONNECTED.


STEP 3: ATTACH THE LIGHT FIXTURE TO THE BRACKET

- SLIDE THE LIGHT FIXTURE OVER THE BRACKET ON THE WALL.
- SECURE THE FIXTURE TO THE BRACKET USING THE PROVIDED SCREW.
- ENSURE THE FIXTURE IS FIRMLY ATTACHED AND PROPERLY ALIGNED BEFORE COMPLETING THE INSTALLATION.

STEP 4: INSERT THE PROVIDED G9 BULB INTO THE SOCKET

STEP 5: SLIDE THE GLASS ELEMENT INTO THE LIGHT FIXTURE

- HANDLE THE GLASS WITH CARE TO AVOID ANY DAMAGE.
- CAREFULLY SLIDE THE GLASS INTO THE TUBE. THIS WILL HELP PREVENT ANY DAMAGE TO THE FIXTURE ITSELF AND AVOID THE WAX FROM DETACHING.

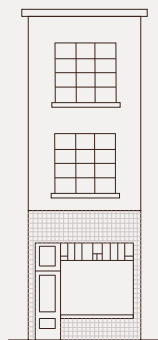

CHRISTIAN ANDRE